

Remove stock bumper. Remove factory valance and fog lights from bumper.





Lift Hanson bumper into place over the ends of the frame. Insert 1/2" bolt with washer from inside the bumper through the frame.

Install the 8 1/2" bolts with a flat washer on the bumper side and a flat washer, lock washer and nut on the frame side. Align bumper with jeep and tighten bolts.



Hanson Offroad
6901Unit C District Blvd
Bakersfield CA 93313 U.S.A.




If you are installing a winch. You will need the proper fairlead mount for your winch(purchased separately).



Georgia de la constanta de la

Follow instructions supplied with fairlead mount to install winch.

Remove factory fog light from mounting location. You will see two mounting tabs on the bottom of the light. Drill the holes on the bottom of the light out to 5/16".

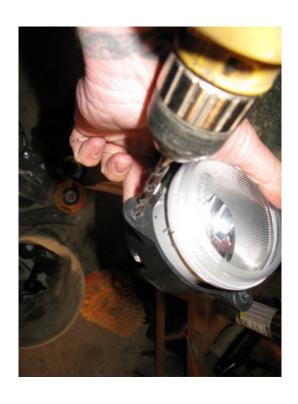


Hanson Offroad 6901Unit C District Blvd Bakersfield CA 93313 U.S.A.





Mount the supplied steel mounting bracket to the light using 1/4" SS bolt and nut.
Mount so the mounting bracket foot is facing the same direction as the light. Repeat on both lights.

The dge. e factory fogs can be slid in between the back of the bumper and the factory crash bar, It fits through the best at the outer edge.

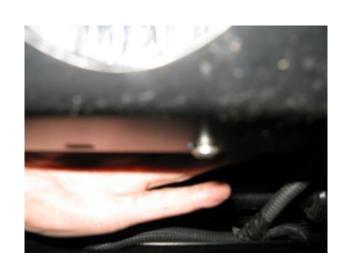



Once light is in the bumper it will mount to the bumper using two 1/4" SS bolts and nuts. Install the button head bolt from the bottom up through the light bracket, align and tighten.

Hanson Offroad
6901Unit C District Blvd
Bakersfield CA 93313 U.S.A.





Tighten all bolts and check for proper fog light pattern, adjust if necessary.

After 500 miles tighten all bolts. Thank you for purchasing a Hanson.



Hanson Offroad
6901Unit C District Blvd
Bakersfield CA 93313 U.S.A.